Ways To Prevent The Trash Bag From Falling Into The Bin







Start by choosing a trash bag that offers a significant amount of overhang.

Secure the bag at the bin's rim, deploying it with extra large rubber bands.



Use dedicated binder clips or cloth pegs to secure the bag in the bin.

Secure the bag's drawstring to a command hook attached to the outer side of the bin.





Tie one of the upper corners of the bag into a knot for a snug fit. Secure the bag using a trash bag cinch attached to the outer side of the bin.

