

# Safety Tips To Follow When Using PRESSURE WASHER GUNS



Always read the instructions manual before using the washer gun.



Wear protective gloves, glasses, and steel-toe boots when using the gun.

Insert earplugs to protect your ears from potential noise-induced damage.



Avoid listening to music while using the gun to ensure full concentration.

Always place the gas pressure unit outside when using the gun indoors.



Start with the widest spray angle and adjust gradually during the washing process.

Opt for extension wands instead of climbing onto ladders for cleaning at heights.



Avoid using the pressure washer gun in the presence of children and pets.

Never leave the pressure washer gun unattended.



Never aim the washer gun at someone, as it should not be used as a water pistol.