



Position the extender halfway between the Wi-Fi and the device.



Place the Wi-Fi extender at a certain height to improve the signal.



Arrange the Wi-Fi extender's antenna vertically for a better signal.



Avoid placing the extender where walls and furniture will obstruct it.



Avoid installing the Wi-Fi extender near windows or water bodies.



Keep the Wi-Fi extender away from metallic objects and mirrors.

